


DB-5 Installation

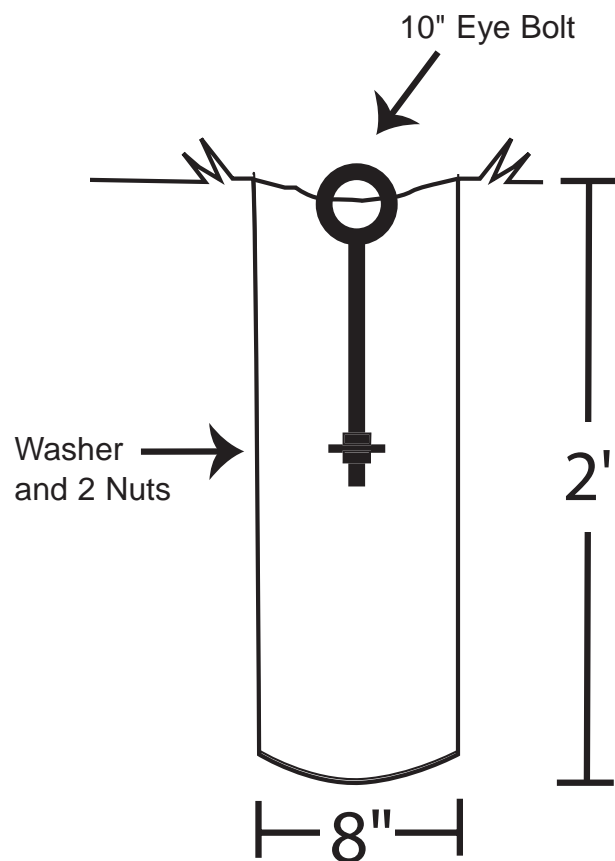

Materials:

- (1) 80lb Bag Sackrete
- (1) 10" Eyebolt w/Washer & 2 Nuts
- (1) Can "Rustoleum Hammered"
(Light Silver)

After spot-welding...

- Fill a 2 foot deep, 8 inch wide hole with Sackrete.
- Sink the 10" eyebolt, with washer and nuts, in concrete just below ground level.
- Padlock basket to eyebolt as shown.
- Spray spot-welds with light silver "Rustoleum Hammered" paint.